

# 1







## Kit 187001

VOLKSWAGEN California, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Caravelle, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Multivan, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Shuttle, 4-dr Bus, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Transporter, 2-dr Single Cab, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Transporter, 4-dr Double cab, (T5) 03-15, (T6) 15-  
 VOLKSWAGEN Transporter, 4-dr Van, (T5) 03-15, (T6) 15-




ISO 11154-E


This kit is only for vehicles with fixpoint mounting.

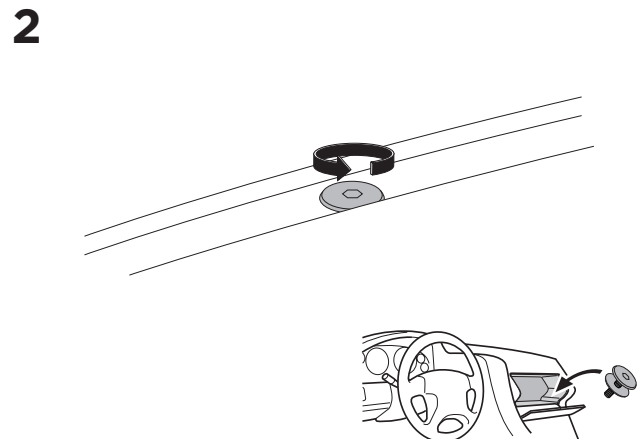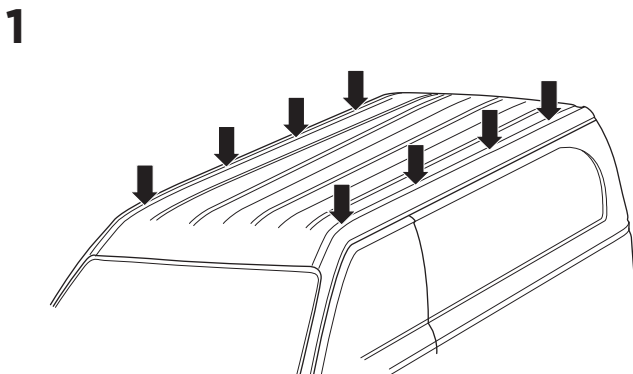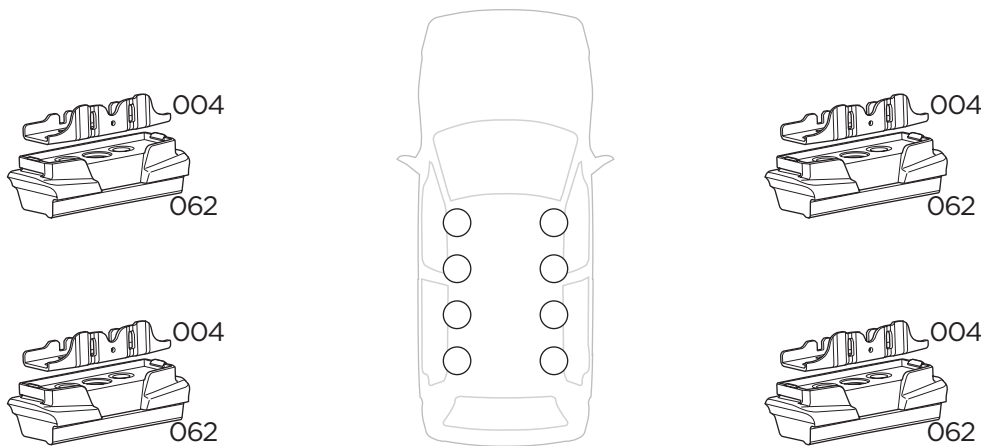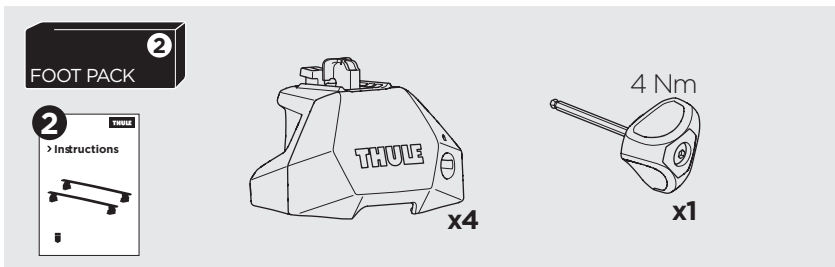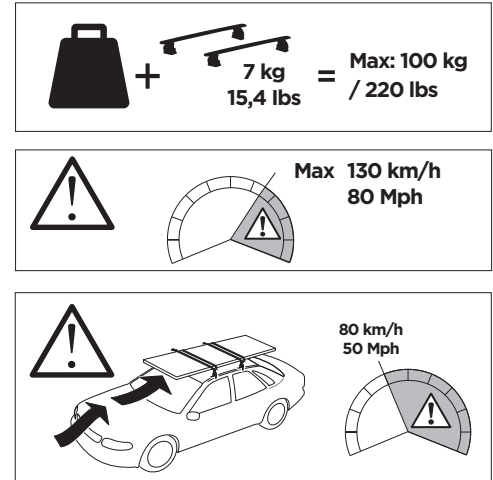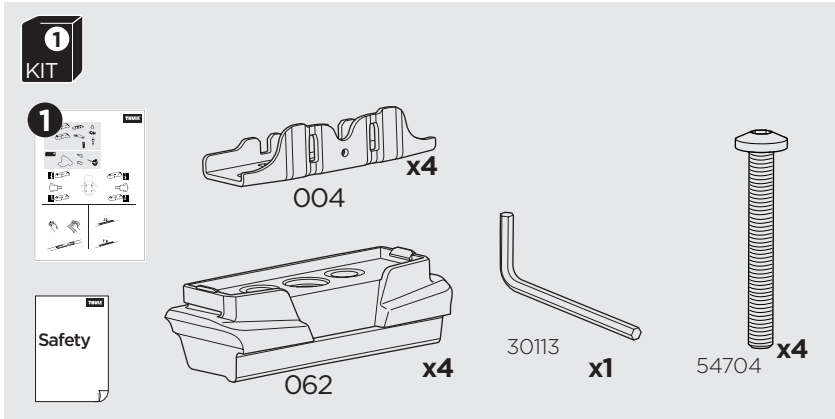



3

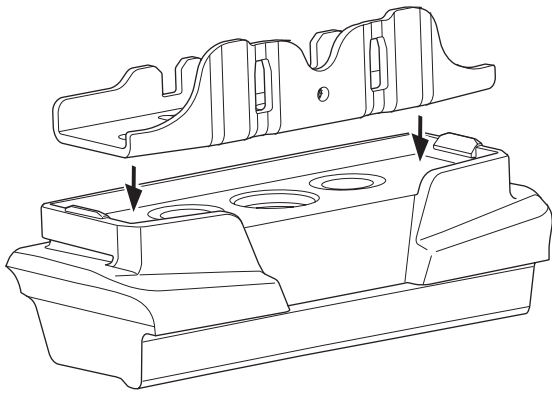

4

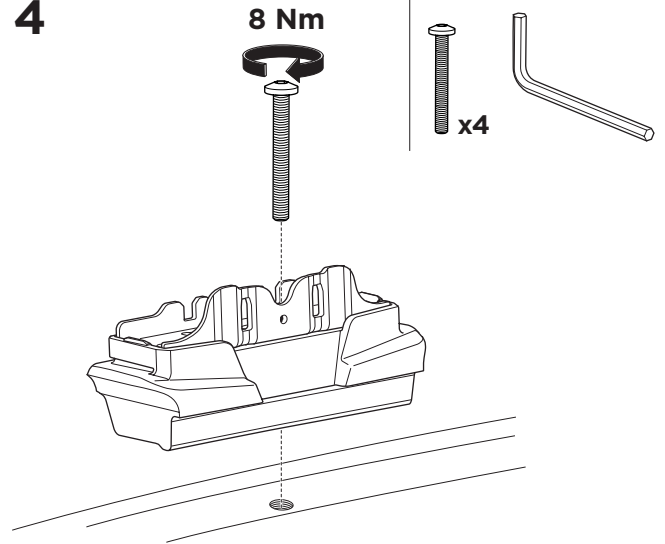


5

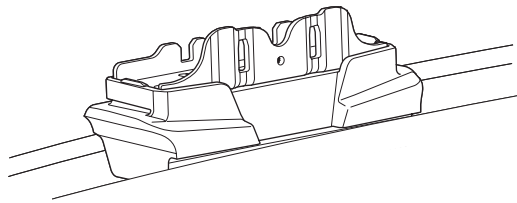


i



A

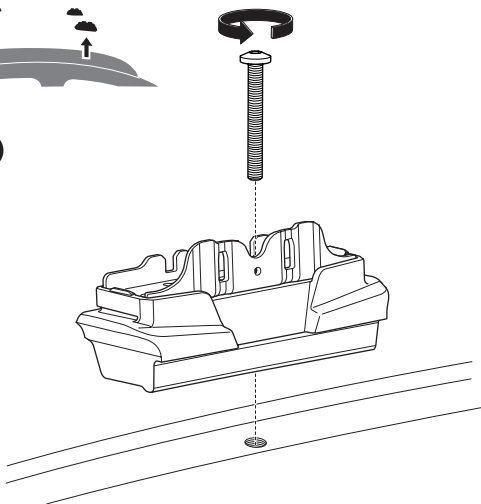

B

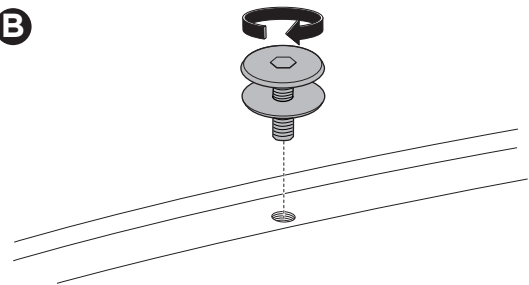

i

